




# EQP-018 Automotive Relay Tester *USER MANUAL*

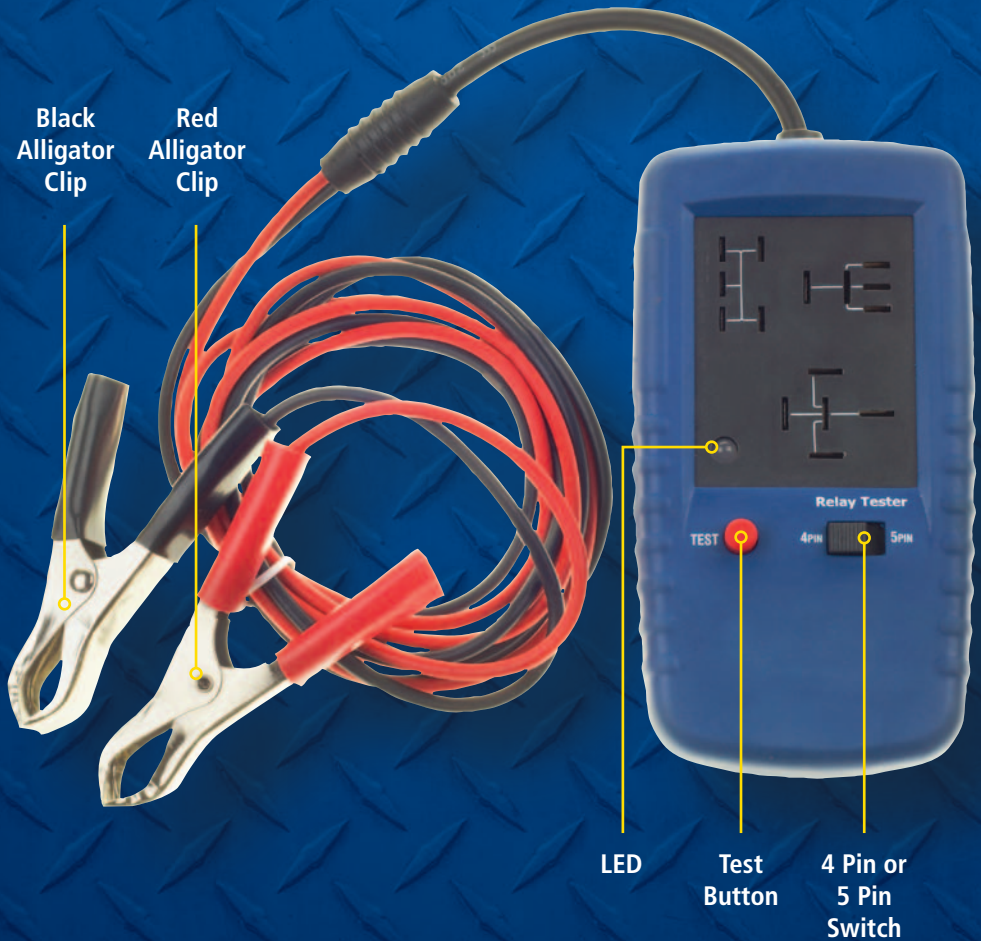

## Operating Instructions:

1. Ensure the relay to be tested is COMPATIBLE with the EQP-018 using chart below.


2. Connect the power leads to the car battery – black alligator clip to negative terminal, red alligator clip to positive terminal



3. Tester is powered up when the LED illuminates in **RED**.



4. Check the relay before plugging into the tester.  
If it's a **4 pin relay** then select **4 PIN** on the tester.



- If its a **5 pin relay** select **5 PIN** on the tester.

5. Plug in the relay into the correct receptacles in the tester.



6. Press the **TEST** button. LED should extinguish during test cycle.



7. Tester will open and close the relay 10 times.

**RELAY GOOD:**

If the test is successful and the relay is **good**, the LED will illuminate in **GREEN**.



**RELAY BAD:**

If the relay is bad, the LED will illuminate in **RED**.



8. Disconnect power leads from the car battery and remove relay from the tester.



***Specialty Tools & Equipment  
you can count on !***

**■ TEST ■ REPAIR ■ REPLACE**

**■ Quality Products ■ 12 Month Warranty  
■ Technical Support**

*Available from leading automotive  
specialists and retailers.*

**[www.plusquip.com.au](http://www.plusquip.com.au)**